FENCE WEAVE®

INSTALLATION INSTRUCTIONS

1. TO DETERMINE HOW MANY ROLLS ARE NEEDED, JUST FOLLOW THIS EASY FORMULA: HEIGHT OF FENCE X LENGTH OF FENCE ÷ 40 = # ROLLS.

2. UNCOIL THE END OF FENCE WEAVE® AND MEASURE AGAINST FENCE DIAGONALLY. CUT STRIPS 3 INCHES LONGER TO ALLOW FOR 1 1/2" OVERLAP ON EACH END. **(DIAGRAM 1)**

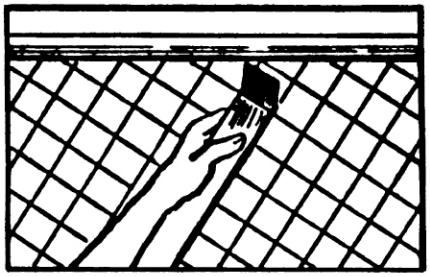

DIAGRAM 1

3. STARTING AT EITHER TOP OR BOTTOM OF FENCE, LACE FENCE WEAVE® OVER ONE AND UNDER THE NEXT WIRE RUNG OF FENCE. **(DIAGRAM 2)**

4. FOLD OVER THE 1 1/2" OVERLAP AND PUSH FASTENER (INCLUDED) THROUGH FENCE WEAVE® SPREADING PRONGS TO SECURE. **(DIAGRAM 2)**

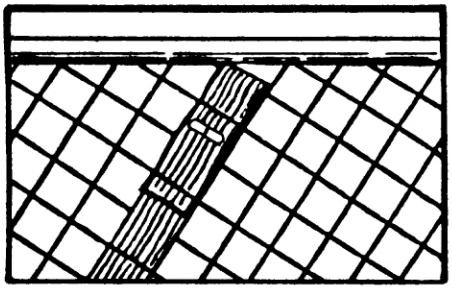

DIAGRAM 2

5. TIGHTEN OPPOSITE END TO TAKE OUT MOST OF THE SLACK (CAUTION: LEAVE 1/2" SLACK FOR SHRINKING) AND INSERT FASTENER.

REPEAT STEPS 1 THROUGH 5 UNTIL FENCE IS COVERED. COMBINE 2 OR MORE COLORS TO CREATE YOUR OWN DESIGNS. **(DIAGRAM 3)**

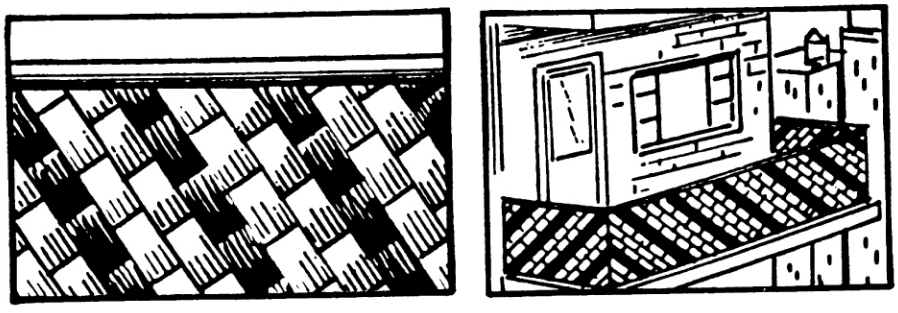

DIAGRAM 3

PATRICIAN PRODUCTS INC.
100 Frank Road ♦ Hicksville, NY 11801
Tel: 1-800-843-7528 ♦ Fax: 516-931-2701
Web: www.patricianproducts.com ♦ e-mail: info@patricianproducts.com